

RAVAS



II 2 (2) G Ex e ib mb IIC T4 Gb
II 2 (2) D Ex ib tb IIIC T125°C Db

RAVAS-RWS-Ex RPW-IT3000Ex (option Wireless) OPERATION MANUAL

Contents

	Page
1. The weighing hand pallet truck RPW-IT3000EX	
1.1. Symbols	3
1.2. Safety instructions	3
1.3. Conformity to Standards	4
1.4. Taking the system into operation	4
1.5. Information on storage battery operation	5
1.6. Battery change	8
2. Maintenance and Servicing	
2.1. Maintenance and servicing	9
2.2. Maintenance Pallet Truck	9
2.3. Inspection Intervals	9
2.4. Inspection Content	10
2.5. Inspections/Maintenance checklist	10
3. Functionality of the weighing terminal	
3.1. Functionality of the weighing terminal	11
4. Technical Data	
4.1. Technical Data	11
4.2. EX-Protection	11
4.3. Accessories and Spare Parts	11
5. Declaration of conformity	
5.1 Declaration of conformity	12