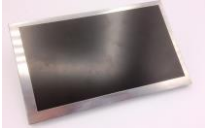


Ref. nr.	Item code		Description	Special instructions	Quantity
344	BA-IN-61		Battery indicator 6100		1.0
343	EB-MAINBOARD-TOUCH		Mainboard Touch plate		1.0
342	EB-POWERSUPPLY-TOUCH		Processor board Touch		1.0
347	EB-WLAN-TOUCH		Wlan board Touch indicator incl. antenna + cable		1.0
349	EP-ADM-BOA-SYS		ADM board Systec		1.0
348	EP-RECEIVER-IFORKS-TOUCH		Receiver iForks Touch		1.0
335	FR-IN-TOUCH		Front panel Touch indicator		1.0
336	HOP-IN-TOUCH-STST		Housing Touch indicator stainless steel		1.0
345	INP-61-MOD-I/O		Input-output module indicator 6100		1.0

Ref. nr.	Item code		Description	Special instructions	Quantity
346	INP-61-SIM-RS232		SIM indicator 6100 for extra RS232		1.0
341	INP-DISPLAY-TOUCH		Display indicator Touch plate		1.0
337	IN-TOUCH		Indicator Touch		1.0
338	IN-TOUCH-IFORKS		Indicator Touch iForks		1.0
340	IN-TOUCH-IFORKS-WLAN		Indicator Touch iForks Wlan		1.0
339	IN-TOUCH-WLAN		Indicator Touch, WLAN		1.0