


RAVAS

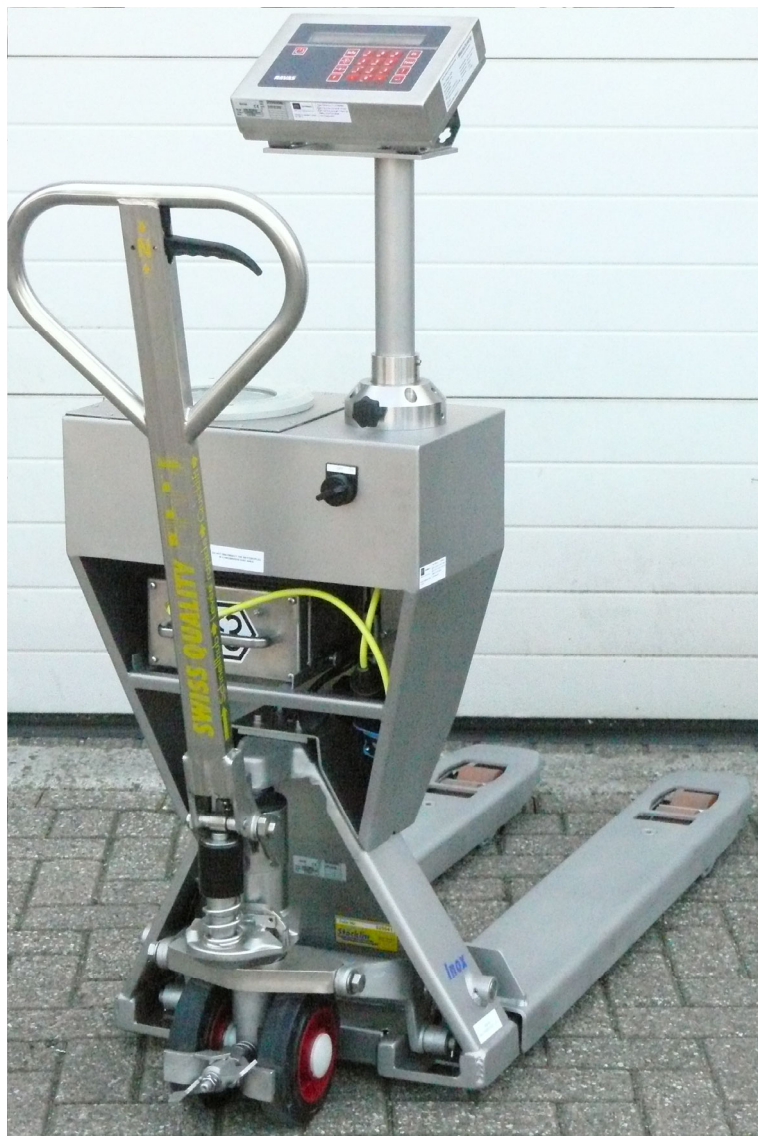

II 2 (2) G Ex e ib mb IIC T4 Gb
II 2 (2) D Ex ib tb IIIC T125°C Db

RAVAS-RWS-Ex RPW-IT3000Ex (option Wireless) OPERATION MANUAL

Contents

	Page
1. The weighing hand pallet truck RPW-IT3000EX	
1.1. Symbols	3
1.2. Safety instructions	3
1.3. Conformity to Standards	4
1.4. Taking the system into operation	4
1.5. Information on storage battery operation	5
1.6. Battery change	8
2. Maintenance and Servicing	
2.1. Maintenance and servicing	9
2.2. Maintenance Pallet Truck	9
2.3. Inspection Intervals	9
2.4. Inspection Content	10
2.5. Inspections/Maintenance checklist	10
3. Functionality of the weighing terminal	
3.1. Functionality of the weighing terminal	11
4. Technical Data	
4.1. Technical Data	11
4.2. EX-Protection	11
4.3. Accessories and Spare Parts	11
5. Declaration of conformity	
5.1 Declaration of conformity	12

RAVAS Europe b.v.
Veilingweg 17, 5301 KM, Zaltbommel, the Netherlands
Tel. (+31) 418 515 220, internet: <http://www.ravas.com>

- DE** **RAVAS GmbH, Aspastrasse 25, D-59394 Nordkirchen,**
Tel. + 49 282 123 583
- IT** **RAVAS Italia S.r.l., Via Italia17, 20874 Busnago,**
Tel. + 39 039 5968 356
- FR** **RAVAS S.A.R.L., 43 Rue de liège , 75008 Paris,**
Tel. + 33 320 661 060
- UK** **RAVAS UK Ltd., Office 130, 5 High street, SL6 1JN Maidenhead,**
Tel. + 44 162 867 3524