 
 
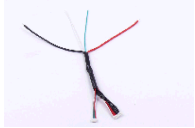 
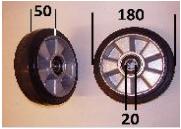 


Ref. nr.	Item code		Description	Special instructions	Quantity
75	CAP-RING-FERRITE		Ferrite ring	Serial number is needed when ordering this compoment	1.0
183	FR-21-RAV-HO-RAV		Front panel 2100 RAVAS housing RAVAS logo		1.0
185	FS-N-RAL3000		Fork shoes Noblelift RAL3000		1.0
187	HOP-KIT-RAV-LOWER-BAT-EXCH-N2		Parts set lid+screw housing lower RAL9011 exch. battery	Only for 6v systems	1.0
12	HOP-PT-FO-SYN		Foot WHPT black synthetic		1.0
14	HOP-RAV-RAL9011-LOWER-EXCH-N2		Housing lower part ECO black RAL 9011 exch. battery N2	from 2013	1.0
57	HOP-SUP-RAV-11		Housing for RAVAS-1100, RAL9005	Option: legal for trade	1.0
77	HOP-SUP-RAV-11-P		Support housing RAVAS 1100 printer	Option: printer	1.0
20	IN-21-B6/B12		Indicator 2100 B6/B12, no RS232	On 6volt systems: Paramater 8 should be set to 3	1.0

Ref. nr.	Item code		Description	Special instructions	Quantity
78	IN-21-B6/B12-RS232		Indicator 2100 B6/B12 + RS232	Serial number is needed when ordering this compoment	1.0
60	IN-21-NU-R76-P7.8		Indicator 2100 NU R76, P7.8 version	Option: legal for trade	1.0
56	INP-21-DISPLAY		Display indicator 2100		1.0
23	LC-1000-350-170		Load cell 1000 kg 350 Ohm	Serial number is needed when ordering this compoment	4.0
24	LC-1000-M-350		Load cell 1000 M 350	Serial number is needed when ordering this compoment	4.0
138	MP-BOLT-M12-40-CYL		Bolt M12 x 40 socket head		8.0
137	MP-BOLT-M12-55-CS		Bolt M12 x 55 countersunk		4.0
140	MP-MP-8		Mounting plate load cell 8 mm		4.0
139	MP-NUT-M12-LOCKNUT		Nut M12 lock nut		4.0

Ref. nr.	Item code		Description	Special instructions	Quantity
79	PRP-CA-APS		Cable printer APS		1.0
67	PRP-PAP-TH-RAVAS-58-32-12		Printer paper APS	Option: printer	3.0
182	PT-N-RAL3000		Pallet truck Noblelift RAL3000 quicklift		1.0
51	PTP-N-HANDLE		PT-N Handle complete , standard version		1.0
52	PTP-N-PUMP-QUICKLIFT		PT-N Pump with quicklift		1.0
53	PTP-N-REP		PT-N Standard pump repair set		1.0
54	PTP-N-WH-ST-RUB		PT-N Wheel steering rubber (309+310)		1.0
55	PTP-N-WH-TL-PU		PT-N Wheel tandem loading polyurethane (219-224)		1.0
58	SA-CH-WF-AUTO		Subassembly, charger Autonome battery	Option: legal for trade	1.0

Ref. nr.	Item code		Description	Special instructions	Quantity
62	SA-EP-LEVELSWITCH		Subassembly, Levelswitch (with 2-axis chip)	Option: legal for trade	1.0
41	SA-HOP-BAT-HOLDER-4XAA		Subassembly, battery holder 4xAA incl. pad printing		1.0
61	SA-HOP-RAV-RAL9011-LOWER		Subassembly, Housing lower part ECO black RAL 9011	On Bruss Basic & RAVAS-1100: option: legal for trade Only used for 12v versions	1.0
184	SA-IN-21-B6/B12-RS-RAV-RAL3000		Subassembly, indicator 2100B6/B12, RS232,APS, RAVAS, RAL3000	Option: printer	1.0
181	SA-IN-21-B-6V-RAV-RAL3000		Subassembly, indicator 2100B6, RAVAS, red RAL3000		1.0
186	SA-IN-21-N-12V-RAV-RAL3000		Subassembly, indicator 2100NU, RAVAS, red RAL3000	Option: legal for trade	1.0
170	SAP-HOP-RAV-RAL3000-UPPER		Subassembly, Housing upper RAL 3000 (incl. bolts and rings)		1.0
76	SA-PR-INT-TH-2100B6E		Subassembly, printer, internal, thermal prepared for 2100B6E	Option: printer	1.0
228	SS-RAVAS-SILVER		Sticker chassis RAVAS silver		2.0