

Ergo-Truck 2



Nr.	Item code	Description	Special instructions	Quantity
D3	LC-1000-350-MR	Load cell 1000, 350 Ohm, multi-range		4,0
D4	MP-BOLT-M12-40-CYL	Bolt M12 x 40 socket head D912 8.8		8,0
D5	MP-BOLT-M12-60-CS	Bolt M12 x 60 countersunk din7991, 10.9		4,0
D7	MP-NUT-M12-LOCKNUT	Nut M12 lock nut din985		4,0
D8	BA-25.6V-20A-LI-F4	Battery 25,6VDC, 20Ah, Li-Ion, for F4		1,0
D15	CH-24V-10A-EPL1531	Charger 24V-10A, for EP EPL1531 truck, EU plug	EU Version	1,0
D15	CH-24V-10A-EPL1531-UK	Charger 24V-10A, for EP EPL1531 truck, UK plug	UK Version	1,0
D16	SAP-HOP-RAV-RAL3000-UPPER	Subassembly, Housing upper RAL3000 (incl. bolts and rings)	Also order the touch panel needed for your system	1,0
D17	FR-32-RAV-HO-RAV	Front panel 3200 RAVAS housing (stp1&2), RAVAS logo		1,0
D18	IN-32-LI	Indicator 3200, for Li-Ion battery		1,0
D19	EB-32-1AD-S	ADC expansion module, i3200 w/ SI8631 chip Spare Part		1,0
D20	SA-HOP-RAV-RAL9011-LOWER	Subassembly, Housing lower part ECO black RAL 9011	Only used for 12v versions	1,0
D23	SAP-MP-BRACKET-RAV+CC	Subassembly, Bracket ECO+compact housing		1,0
D25	EB-CON-100V-12V-120MA	Convertor board 100V 12V 120MA	Option: 12v without printer or other external devices	1,0

Nr.	Item code	Description	Special instructions	Quantity
D51	CA-2-0,75-FLAT	Cable 2x0,75 flat - per meter		1,0
D57	EP-FUSE-3,15A	Fuse 5x20 3,15A		1,0
D58	EP-FUSE-HOL-FL	Fuse holder floating		1,0
D75	PT-EL-EP-F4-RAL3000	Pallet truck semi-electric, F4, RAL3000, w/ caster wh	Ergo-Truck 2	1,0
D91	EB-4-LC-21-41	Junction board 4xLC		1,0
D94	MP-MP-6	Mounting plate load cell 6 mm		8,0
D94	MP-MP-3	Mounting plate load cell 3 mm		4,0
D103	SA-IN-32-RAV-ERGO-F4-RAL3000	Subass., i3200, RAVAS Ergo-Truck 2, RAL3000		1,0
D106	SA-HO-SYN-JUNCTION	Subassembly, Junction box with bolts and screws		1,0