

Indicator 3200 Wired

Nr.	Item code	Description	Special instructions	Quantity
D16	SAP-HOP-RAV-RAL3000-UPPER	Subassembly, Housing upper RAL3000 (incl. bolts and rings)	Also order the touch panel needed for your system	1.0
D17	FR-32-RAV-HO-RAV	Front panel 3200 RAVAS housing (stp1&2), RAVAS logo		1.0
D18	IN-32	Indicator 3200		1.0
D19	EB-32-1AD	ADC expansion module, i3200		1.0
D19	EB-32-1AD-M	ADC expansion module M, i3200	Option: legal for trade	1.0
D20	HOP-RAV-RAL9011-LOWER-EXCH-N2	Housing lower part ECO black RAL 9011 exch. battery N2	from 2013. Only for 6v systems	1.0
D20	SA-HOP-RAV-RAL9011-LOWER	Subassembly, Housing lower part ECO black RAL 9011	Only used for 12v versions	1.0
D21	HOP-KIT-RAV-LOWER-BAT-EXCH-N2	Parts set lid+screw housing lower RAL9011 exch. battery	Only for 6v systems	1.0
D22	SAO-HOP-BAT-HOLDER-4XAA	Subassembly, battery holder 4xAA incl. pad printing	Only for 6v systems	1.0
D25	EB-CON-9/100V-12V-ISOLATED	Converter 9/100v 12v isolated		1.0
D25	EB-CON-100V-12V-120MA	Convertor board 100V 12V 120MA		1.0
D26	SA-IN-32-1AD-12V	Subassembly, indicator 3200, wired version, 12v (ind. only)		1.0
D26	SA-IN-32-1AD-6V	Subassembly, indicator 3200, wired version, 6v (ind. only)		1.0

Nr.	Item code	Description	Special instructions	Quantity
D26	SA-IN-32-1AD-9/100V-12V	Subassembly, ind 3200, wired version, 9/100V-12V (ind. only)		1.0
D33	EB-OPT-WIFI-XPICO240	Option board WIFI, Xpico 240	Option: Wifi	1.0
D34	EP-ANTENNE-WLAN-UFL	Antenne WLAN, UFL connector	Option: Wifi	1.0
D35	EB-OPT-N2-BLT-4.0-CLASSIC	Option board bluetooth 4.0 classic	Option: BLT	1.0