

RCS

Nr.	Item code	Description	Special instructions	Quantity
D16	SAP-HOP-RAV-RAL3000-UPPER	Subassembly, Housing upper RAL3000 (incl. bolts and rings)	Also order the touch panel needed for your system	1.0
D17	FR-21-RAV-HO-RAV	Front panel 2100 RAVAS housing RAVAS logo		1.0
D18	IN-21-B6/B12	Indicator 2100 B6/B12, no RS232	On 6volt systems: Paramater 8 should be set to 3	1.0
D18	IN-21-B6/B12-RS232	Indicator 2100 B6/B12 + RS232	Option: printer Serial number is needed when ordering this compoment	1.0
D20	HOP-RAV-RAL9011-LOWER-EXCH-N2	Housing lower part ECO black RAL 9011 exch. battery N2	from 2013. Only for 6v systems	1.0
D20	SA-HOP-RAV-RAL9011-LOWER	Subassembly, Housing lower part ECO black RAL 9011	Only used for 12v versions	1.0
D21	HOP-KIT-RAV-LOWER-BAT-EXCH-N2	Parts set lid+screw housing lower RAL9011 exch. battery	Only for 6v systems	1.0
D22	SAO-HOP-BAT-HOLDER-4XAA	Subassembly, battery holder 4xAA incl. pad printing	Only for 6v systems	1.0
D23	SAP-MP-BRACKET-RAV+CC	Subassembly, Bracket ECO+compact housing		1.0
D25	EB-REG-12V-12V-120MA	Regulator 12-12V 120 mA		1.0
D25	EB-CON-9/100V-12V-ISOLATED	Converter 9/100v 12v isolated		1.0
D25	EB-CON-100V-12V-120MA	Convertor board 100V 12V 120MA	Option: 12v without printer or other external devices	1.0
D28	MP-BRACKET-RAM-PR-TH-APS	Bracket RAM Martel printer APS printer	Option: printer for 6v systems	1.0

Nr.	Item code	Description	Special instructions	Quantity
D51	CA-2-0,75-FLAT	Cable 2x0,75 flat - per meter		5.0
D61	LC-ROS-PT404	Oil pressure sensor PT404		1.0
D87	SA-PR-INT-TH-2100B6E	Subassembly, printer, internal, thermal prepared for 2100B6E	Option: printer	1.0