

## ERROR MESSAGES

Display	Meaning	Possible cause/Solution	Out of error mode
Err01	Load cell signal is unstable	Check loadcell connection	Automatic when solved
Err02	Overload on full scale	Remove weight	Automatic after removal
Err03	Gross negative. This action is not allowed		Automatic
Err04	Out of zero range	Perform new zero calibration	Press any key
Err05	Sampling accuracy too low	Increase sampling number	Press any key
Err06	Input signal too high	Check loadcell connection	Automatic when solved
Err08	Calibration out of range (negative)	Check loadcell output	Automatic when solved
Err09	Calibration out of range (signal too low)	Check loadcell output	Automatic when solved
Err10	Calibration count 2nd(3rd) point lower than count 1st(2nd) point	Enter value higher than previous one	Automatic
Err11	Calibration error	Perform new calibration	Automatic
Err14	Setpoint value 2 < setpoint value 1. Action not allowed	Enter value higher than previous one	Automatic
Err97	Approved system. Action not allowed.	Replace jumper JP1 if intended action(Attention: you will need new approval after this action!)	Press Clear 2x if unintended action
Err98	Calibration point must be higher than previous one	Enter value higher than previous one	Automatic
Err99	Action only allowed in start-up units	Action performed on the keyboard while in second units mode	Automatic
ErrF1	Problem with fork 1 (no communication)	Wrong power on sequence used No battery placed in fork 1 If not	Power off indicator. Restart forks first than indicator Replace the battery module Contact the RAVAS Service department
ErrF2	Problem with fork 2 (no communication)	No battery placed in fork 2 If not	Replace the battery module Contact the RAVAS Service department
----	Loadcell signal negative	Lift up the forks from the ground	Automatic after lifting up the forks
L - _	Forks are out of level (only legal-for-trade version)	Put the forks into horizontal position	Automatic after leveling out
ErrCS	Problem with correction sensor	Check connection correction sensor If connection ok	Automatic after solved  Contact the RAVAS Service department

## DISPLAY MESSAGES

Display	Meaning
BltF1	Successful Bluetooth link with fork 1 <i>No error</i>
BltF2	Successful Bluetooth link with fork 2 <i>No error</i>