

RIS – RESTful API

Name	Description	HTTP	URI
<i>Get List of Configured Scales</i>	Returns a list with configured scale aliases at the RIS	GET	/rest/scale
<i>Get Configured Scale</i>	Return the configuration for the specified <i>alias</i>	GET	/rest/scale/{alias}
<i>Get Net Weight</i>	Query the net weight of the RAVAS Indicator	GET	/rest/scale/{alias}/weight/net /rest/scale/{alias}/weight/net?no-motion=true /rest/scale/{alias}/weight/net?no-motion=false
<i>Get Gross Weight</i>	Query the gross weight of the RAVAS Indicator	GET	/rest/scale/{alias}/weight/gross /rest/scale/{alias}/weight/gross?no-motion=true /rest/scale/{alias}/weight/gross?no-motion=false
<i>Get Net Weight and Alibi Number</i>	Query the net weight and alibi number of the RAVAS Indicator for the current weighing	GET	/rest/scale/{alias}/weight-alibi-nr/net
<i>Get Gross Weight and Alibi Number</i>	Query the gross weight and alibi number of the RAVAS Indicator for the current weighing	GET	/rest/scale/{alias}/weight-alibi-nr/gross
<i>Set Tare Weight</i>	Set the tare	PUT	/rest/scale/{alias}/tare /rest/scale/{alias}/tare?toggle=true /rest/scale/{alias}/tare?toggle=false
<i>Reset Tare Weight</i>	Reset tare	PUT	/rest/scale/{alias}/tare/reset
<i>Set Zero</i>	Set zero weight	PUT	/rest/scale/{alias}/zero
<i>Reset Zero</i>	Reset zero	PUT	/rest/scale/{alias}/zero/reset