

RAVAS-1100

Nr.	Item code	Description	Special instructions	Quantity
D3	LC-1000-350-170	Load cell 1000 kg 350 Ohm, cable length 1.7m	From 02.2023	4,0
D3	LC-1000-M-350	Load cell 1000 M 350	Serial number is needed when ordering this component. Mandatory for legal for trade systems.	4,0
D4	MP-BOLT-M12-40-CYL	Bolt M12 x 40 socket head DIN912 8.8 - 93 Nm		8,0
D5	MP-BOLT-M12-60-CS	Bolt M12 x 60 countersunk din7991, 10.9 137 Nm		4,0
D7	MP-NUT-M12-LOCKNUT	Nut M12 lock nut din985		4,0
D15	SA-CH-WF-AUTO	Subassembly, charger Autonome battery	Option: legal for trade	1,0
D16	SAP-HOP-RAV-RAL3000-UPPER	Subassembly, Housing upper RAL3000 (incl. bolts and rings)	Also order the touch panel needed for your system	1,0
D17	FR-21-RAV-HO-RAV	Front panel 2100 RAVAS housing RAVAS logo		1,0
D18	IN-21-B6/B12	Indicator 2100 B6/B12, no RS232	On 6volt systems: Paramater 8 should be set to 3	1,0
D18	IN-21-B6/B12-RS232	Indicator 2100 B6/B12 + RS232	Option: printer Serial number is needed when ordering this component	1,0
D18	IN-21-NU-R76-P7.8	Indicator 2100 NU R76, P7.8 version	Option: legal for trade Serial number is needed when ordering this component	1,0
D20	HOP-RAV-RAL9011-LOWER-EXCH-N2	Housing lower part ECO black RAL 9011 exch. battery N2	from 2013. Only for 6v systems	1,0
D20	SA-HOP-RAV-RAL9011-LOWER	Subassembly, Housing lower part ECO black RAL 9011	Only used for 12v versions	1,0
D21	HOP-KIT-RAV-LOWER-BAT-EXCH-N2	Parts set lid+screw housing lower RAL9011 exch. battery	Only for 6v systems	1,0

Nr.	Item code	Description	Special instructions	Quantity
D22	SAO-HOP-BAT-HOLDER-4XAA	Subassembly, battery holder 4xAA incl. pad printing	Only for 6v systems	1,0
D75	PT-N-RAL3000	Pallet truck Noblift RAL3000 quicklift		1,0
D76	PTP-N-PUMP-QUICKLIFT	PT-N Pump with quicklift	For systems with the Noblift chassis	1,0
D77	PTP-N-HANDLE	PT-N Handle complete , standard version	For systems with the Noblift chassis	1,0
D78	PTP-N-WH-ST-RUB	PT-N Wheel steering rubber (309+310)	For systems with the Noblift chassis	2,0
D79	PTP-N-WH-TL-PU	PT-N Wheel tandem loading polyurethane (219-224)		2,0
D80	PTP-N-REP	PT-N Standard pump repair set	For systems with the Noblift chassis	1,0
D81	FS-N-RAL3000	Fork shoes Noblift RAL3000		1,0
D87	PR-INT-TH-MPP5510-5V	Printer Martel MPP5510-518		1,0
D88	PRP-PAP-TH-RAVAS-58-32-12	Printer paper APS	Option: printer	3,0
D89	PRP-CA-APS	Cable printer APS	Option: printer	1,0
D92	SAO-EP-LEVELSWITCH	Subassembly, Levelswitch (with 2-axis chip)	Option: legal for trade	1,0
D94	MP-MP-8	Mounting plate load cell 8 mm		4,0
D95	MP-RING-M12	Ring M12, din125A		4,0
D100	HOP-SUP-RAV-11	Housing for RAVAS-1100, RAL9005	Option: legal for trade	1,0
D100	HOP-SUP-RAV-11-P	Support housing RAVAS 1100 printer	Option: printer	1,0
D100	HOP-PT-FO-SYN	Foot WHPT black synthetic		1,0
D103	SA-IN-21-B-6V-RAV-RAL3000	Subassembly, indicator 2100B6, RAVAS, red RAL3000		1,0

Nr.	Item code	Description	Special instructions	Quantity
D103	SA-IN-21-B6/B12-RS-RAV-RAL3000	Subassembly, indicator 2100B6/B12, RS232,APS, RAVAS, RAL3000	Option: printer	1,0
D103	SA-IN-21-N-12V-RAV-RAL3000	Subassembly, indicator 2100NU, RAVAS, red RAL3000	Option: legal for trade	1,0
D104	INP-21-DISPLAY	Display indicator 2100		1,0
D185	CAP-RING-FERRITE	Ferrite ring	Serial number is needed when ordering this compoment	1,0