

RAVAS



W-Lan Konfigurationsanleitung für RAVAS Proline Touch und andere Waagen mit Touch Anzeige mit eingebauter W-Lan Modul

Ab Baujahr 2013

Settings Roche Diagnostics

Service Menu Settings

Press & hold the screen where the weight is visible for 2 seconds and release.

You will enter the service menu.

Password = 2234




Navigate through the menu's with the green arrows.

With ← and → you can change a setting

With ↑ key you will navigate to the top menu

With the "Enter" key you will accept

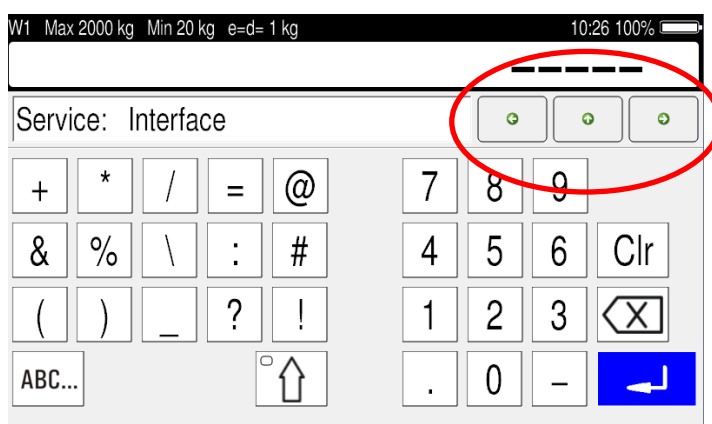

Service Settings:

Navigate to Interface\Com0(Eth.)

Com 0 Port = 1234

Com 0 Protocol = NoAck

Com 0 Start Char = 0

Com 0 Start Char = 10

Com 0 Checksum = None

Navigate to General

Language = German

Date = dd.mm.yy

Time = hh.mm

Decimal Char = dot

Aproval signs = No

Tare Mode = Gross/Net

Cont Out = MT- ICS

Cont Out = Eth.

Cont Out port = 1900

Cont Out rate = 1

Light off = 0

Power off = 0

Navigate to Network:

Turn auto ping on = yes

Navigate to WLAN

This is configured by the IT department. I don't have information about it

Application Settings

Press "Zurück"

Press "Dataeingaben"

Press "Einstellung"

Press "Allgemein"



Change the following settings:

Datenübertragung: Yes

EDV-Kanal: Ethernet

Press: beenden

Dateneingaben/Einstellungen/Allgemein

Terminal-Nr.	1	▲
Datum	30.01.17	
Zeit	07:41	
Mindestgew.	20	
Kontrollgew.	0	
Datenübertragung?	☐	
EDV-Kanal	Ethernet ▼	▼

Beenden [] [] [] Ok

Press: Druckereinstellung

Change: Mit drucker = No

For calibration of the system I refer to the Calibration manual.